

2020 Buick Truck Enclave AWD V6-3.6L

Vehicle > Maintenance > Fluids > Fluid - A/T > Service and Repair > Procedures > 9T65 (M3W) - Automatic Transmission

TRANSMISSION FLUID DRAIN AND FILL

Document ID: 4496503

Removal Procedure


1. Raise and support the vehicle. Lifting and Jacking the Vehicle.



2. Remove the fluid pan drain plug (1).
3. Drain transmission fluid into a suitable container.
Caution: Refer to Component Fastener Tightening Caution.
4. Install the fluid pan drain plug (1) and tighten to **12 Nm (106 lb in)**.


Installation Procedure

1. Lower the vehicle.

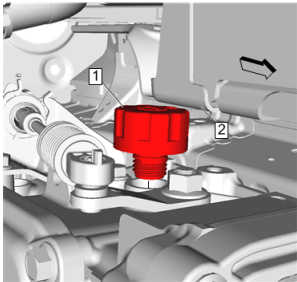

Note: If the transmission fluid filler cap cannot be accessed, proceed to Step 3 in this procedure.


2. Remove the fluid fill cap (1), if accessible.
3. Remove the left front wheel and tire assembly. Tire and Wheel Removal and Installation
4. Remove the fluid filler plug (1) from the transmission.

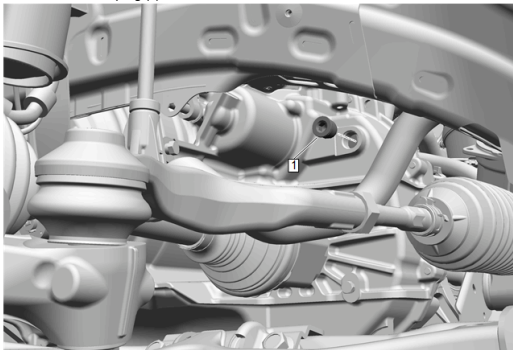

5. Fill the transmission to the proper level with the correct fluid. Transmission Fluid Level and Condition Check and Adhesives, Fluids, Lubricants, and Sealers.


Note: If the transmission fluid filler cap cannot be accessed, proceed to step 7 in this procedure.

6. Install the fluid fill cap (1), if accessible.

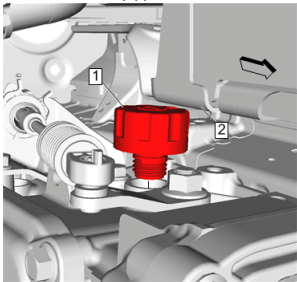

Caution: Refer to Component Fastener Tightening Caution.

7. Install the fluid filler plug (1) to the transmission and tighten to **40 Nm (30 lb ft)**.

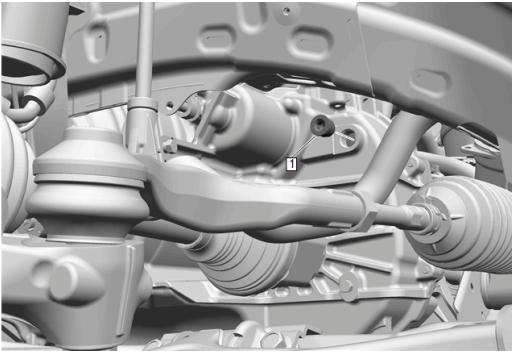

8. Install the left front wheel and tire assembly. Tire and Wheel Removal and Installation